


Biqu B1 3D Printer – How to Connect

1. Select the Biqu B1 printer from the printer dropdown
2. Click the WiFi symbol next to the printer (red circle)

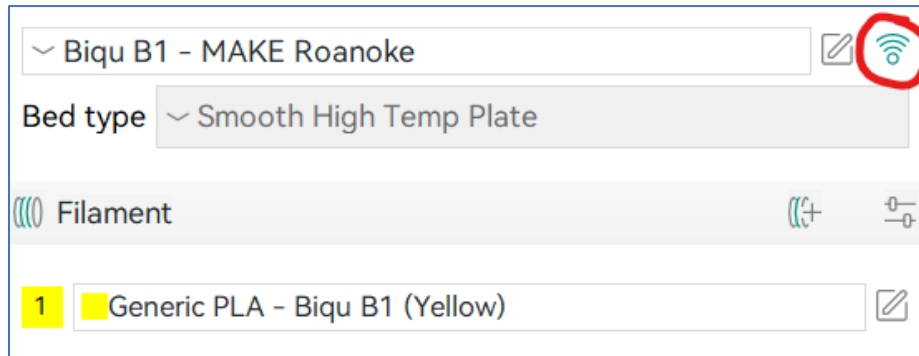

~ Biqu B1 - MAKE Roanoke

Bed type ~ Smooth High Temp Plate


Filament

1 Generic PLA - Biqu B1 (Yellow)

3. Enter the information below into the corresponding fields

Hostname/IP Address: 10.20.1.16

API Key: AA48AD025C7145C4A04083EDD57678CD

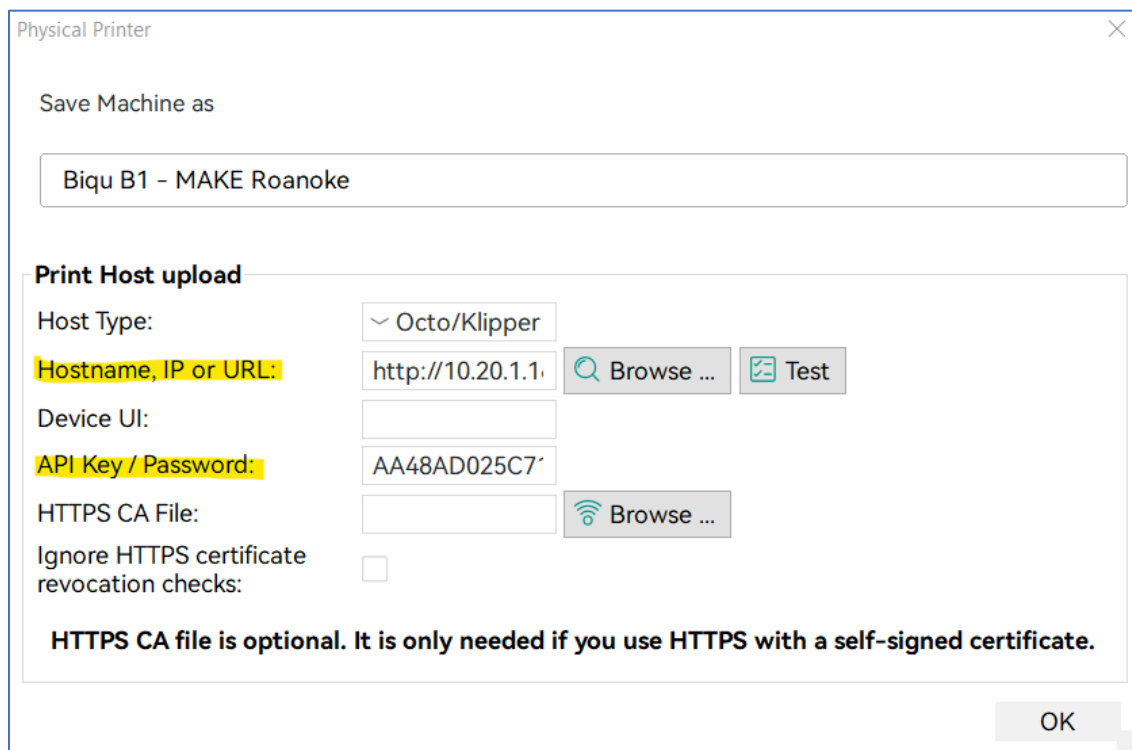

Physical Printer

Save Machine as

Biqu B1 - MAKE Roanoke

Print Host upload

Host Type: ~ Octo/Klipper

Hostname, IP or URL: http://10.20.1.1 Browse ... Test

Device UI:

API Key / Password: AA48AD025C7

HTTPS CA File: Browse ...

Ignore HTTPS certificate revocation checks: ☐

HTTPS CA file is optional. It is only needed if you use HTTPS with a self-signed certificate.

OK